


HOW TO ACTIVATE A BATTERY FOR ZARTEK ZA-650 INTERCOM HANDSET

The battery of the handset may get stuck in a sleep state if left off for a long period and need activation before it can take a charge.


First reset the battery by removing it from handset, then wait 5 minutes before reconnecting and placing on the charger. If the reset does not let the battery begin charging, follow the steps below to activate the battery.

Step 1: Unplug the charging cable from the desktop cradle so power is off.

Take 2 thin wires of different colors. Connect each wire to the RIGHT and LEFT charging contacts on the desktop cradle, as shown in the picture below. Make sure that the wires NEVER touch each other or the middle charging contact and cause a short circuit.

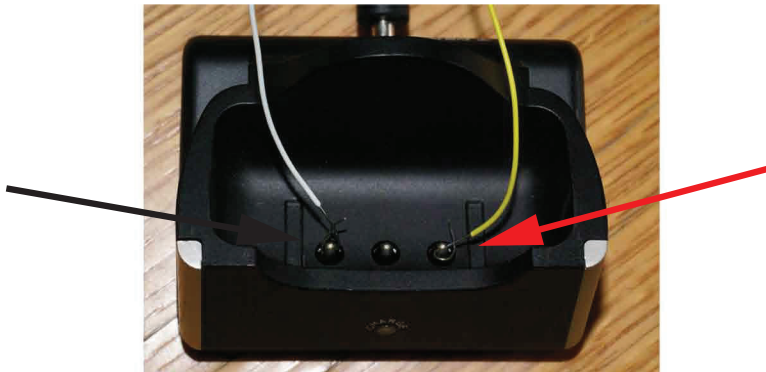

Step 2: Connect the other ends of the wires to the battery as shown in the picture below. Note that the battery has polarity so the RED wire of the battery connector must be linked to the RIGHT side of the charging cradle using the wire and BLACK to the LEFT.

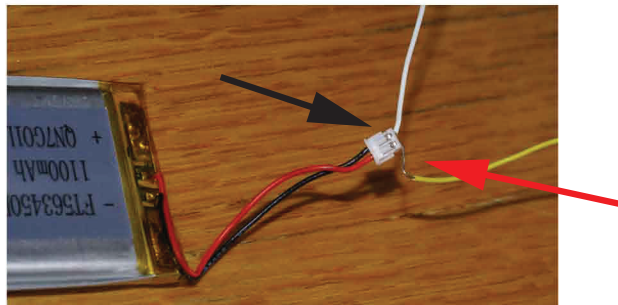

Step 2: Check all connections are secure and that wires are not touching each other. Plug the charging cable to the desktop cradle and the charge LED will light on. Leave power on for 30 seconds then disconnect power. Remove wires from the charger and battery and place battery into handset to begin charging as normal.

